

8 Zone 8 Scene RF Remote Controller

Model No.: RS10

8 Zone/8 scene/Touch color wheel/Wireless remote 30m distance/AAAx2 battery/Magnet stuck fix



CE RoHS LVD RED


Features

- 8 zone 8 scene RF 2.4G remote.
- Apply to single color, dual color, RGB, RGBW or RGB+CCT RF LED controller.
- Ultra-sensitive color adjustment touch wheel.
- Each remote zone can match one or more receiver.
- AAAx2 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be stuck on back holder.

Technical Parameters

Input and Output		Safety and EMC	
Output signal	RF(2.4GHz)	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4
Working voltage	3VDC(AAAx2)	Safety standard (LVD)	EN 62368-1:2020+A11:2020
Working current	< 5mA	Radio Equipment (RED)	ETSI EN 300 328 V2.2.2
Standby current	< 10µA	Certification	CE, EMC, LVD,RED
Standby time	1 year	Warranty	
Remote distance	30m (Barrier-free space)	Warranty	5 years
Environment		Weight	
Operation temperature	Ta: -30°C ~ +55°C	Net weight	78g
IP rating	IP20	Gross weight	111g

Mechanical Structures and Installations

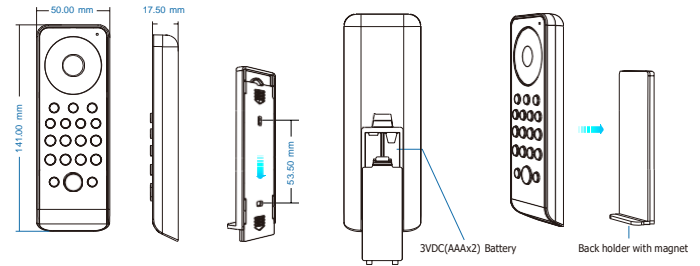

To fix the remote, three options are offered for selection:

Option 1: stuck the remote on any metal surfaces directly.

Option 2: fix the remote' back holder on the wall with two screws.

Option 3: adhere the remote' back holder to the wall with paster.

Operation

- When turn on light, the indicator displays blue. when turn off light, the indicator displays red.
- When touch the color wheel, the indicator will display the same color.
- When press or touch operation is invalid (If the light is off), the indicator displays red.
- To extend battery life, no touch or press key operation after a few seconds, the touch wheel will enter sleep state, you need press any key to make touch wheel quit sleep state.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key.

Match:

Short press match key,
immediately press zone key of the remote.
The LED indicator fast flash a few times
means match is successful.

Delete:

Press and hold match key for 5s to delete all match,
The LED indicator fast flash a few times
means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again.
Immediately short press zone key 3 times on the remote.
The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again.
Immediately short press zone key 5 times on the remote.
The light blinks 5 times means all matched remotes were
deleted

Key function



Each zone can match single color, dual color (WW/CW), RGB, RGBW, or RGB+CCT(WW/CW) RF LED controller.

- 1 2 3 4 5 6 7 8 + * : Single color
- 1 2 3 4 5 6 7 8 + CCT : Dual color (WW/CW)
- 1 2 3 4 5 6 7 8 + RGB : RGB
- 1 2 3 4 5 6 7 8 + M+ : RGBW
- 1 2 3 4 5 6 7 8 + S+ : RGB+CCT

For example, long press 1 + RGB key for 2s will set zone 1 as RGB light type. When remote type change OK, the green indicator goes on a long time.


Long press key + any of the five keys for 2s will set all 8 zones to the same light type correspondingly.

- : Touch to change current zone brightness, color temperature or RGB color. Press BRT, CCT or RGB key to switch between brightness wheel, color temperature wheel or RGB color wheel.


When it is brightness wheel, touch to change brightness.
When it is color temperature wheel, touch to change color temperature.
When it is RGB color wheel, touch to change RGB color.



Brightness wheel

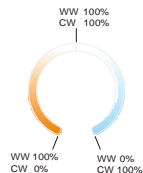


Color temperature wheel

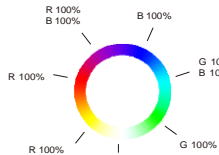


RGB color wheel

- : Adjust brightness, at the same time, multi-color wheel become brightness wheel. short press 10 levels, long press 2s get max or min brightness.


- : Adjust color temperature, at the same time, multi-color wheel become color temperature wheel. For dual color or RGB+CCT(WW/CW), adjust color temperature by WW/CW channel, short press 11 levels, long press adjust WW+CW brightness continuously.

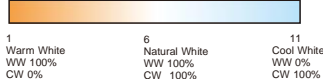


For RGB, adjust color temperature by mix R/G/B channel, 11 levels.

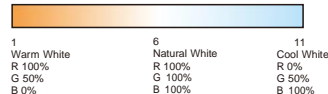

 For RGB, adjust color temperature by adjust W channel brightness, 11 levels.



- : Short press get 24 kinds static RGB color, at the same time, multi-color wheel become RGB color wheel.

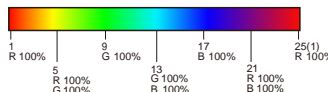

- : Short press switches dynamic mode built in controller, long press 2s Mode+ run mode cycle, long press 2s Mode- run the first mode.

- : For dynamic RGB mode, adjust dynamic mode speed, short press 10 levels, long press 2s get the fastest / slowest speed. For static RGB color, adjust saturation, namely change current static RGB color to mixed white slowly, short press 11 levels, long press 1-6s for continuous 256 levels adjustment.

- 1 2 3 4 : When 1-8 key is zone function, short press selects and turn on zone light, long press 2s turn off zone light.
- 5 6 7 8

When 1-8 key is scene function, short press recalls the scene, long press 2s save current light state into 1-8. The LED indicator display green longer when save OK. 8 zone recall or save synchronously.

- : Short press to select zone 1-8 sequentially, at the same time set 1-8 key as zone function key. The LED indicator will display blue or red when 1-8 key is zone on/off operation.
- : Short press to recall scene 1-8 sequentially, at the same time set 1-8 key as scene function key. The LED indicator will display green when 1-8 key is scene recall/save operation.
- : Short press turn on/off all zone or scene light.